


Wireless Joystick for PS4

Model No.: 8951 (V1.3)

User Guide

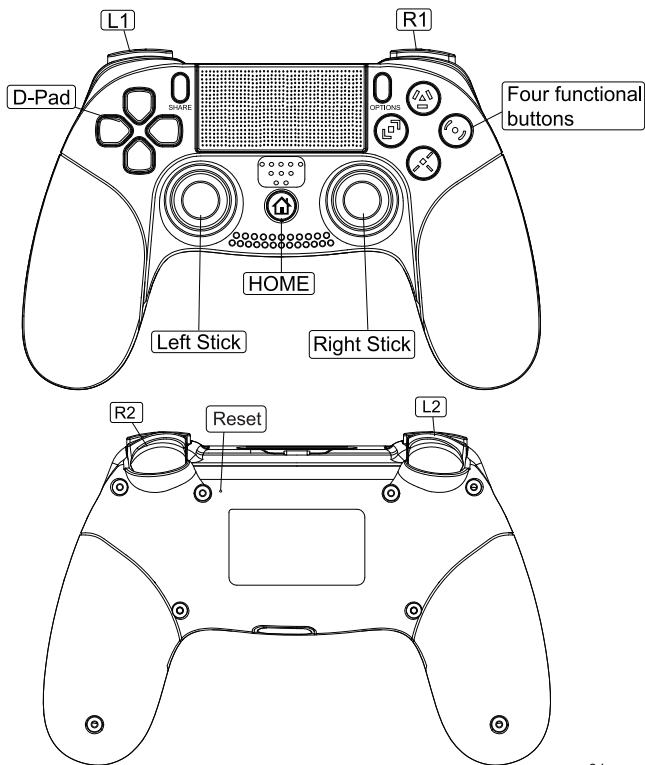

Preface


- 1) Thank you for choosing our product. For bringing you with pleasant gaming experience, please read this user guide and all safety instructions carefully to ensure safe and proper use.
- 2) The instructions in this user guide are based on the default settings of the device.
- 3) All pictures, statements and text information in this guide are for references only, actual product prevails. Updates are subject to change without prior notice, these updates will be edited in a new version guide.
- 4) Available functions and additional services may vary due to different devices, software or service providers.
- 5) Official software update or source code change or other irresistible factors may cause some games can't be operated with this product, our company won't take any responsibility on it and we reserve the right of final interpretation.

Product brief introduction

- 1) This hand shank is mainly compatible with the P4 game console.P3 console
- 2) High performance wireless connection technology is adopted, it provides stable signal without delay or line drop within 8m. It's with strong anti-interference performance and won't be affected easily by other wireless devices.
- 3) Built-in with a rechargeable lithium battery, the joystick is with charging display and low power display functions.
- 4) Built-in with colorful LEDs indicating joystick channels for players, different LED color indicates different joystick.
- 5) Built-in with two asymmetrical motors in left and right providing double-shock function.
- 6) Built-in with 3D accelerating sensor and Gyro sensor providing with 6-axis sensing function.
- 7) Configured with a 3.5mm jack for earphone and speaker input thus audio signal can be output in gaming. AXU expansion port is reserved.
- 8) Touch panel and panel button functions are supported by this joystick.
- 9) This joystick can be upgraded through updated software by connecting with PC.

Button function brief description

- 1) HOME button: Short press to display main interface and switch applications; long press to end application, log off/power off console and display operable items.

- 2) : Four functional buttons control character's actions in games.
- 3) D-Pad: Up, down, left and right, direction options.
- 4) Left and Right sticks: Control character's movement and entire screen direction.
- 5) "SHARE" share key and "OPTIONS" option key: when connecting to the P4 host, use the share and option buttons respectively. The "SHARE" key corresponds to the "SELECT" key and the "OPTIONS" key corresponds to the "START" key.

Note: Button function may vary from game to game due to different games, actual operation prevails.

Connecting and using instruction

1) Connecting with P4 console

- A. P4 host power into the interface, plug the data cable into the host USB port, the handle connected to the cable, and then press the handle end of the small house menu button, the handle LED lights flash, when a single color LED on the handle, indicating that the connection was successful. Then unplug the cable. The handle is auto-matically connected to the main engine.
- B. Handle color LED indication status description: show player status, press the small house key, LED light bar will light in blue, red, green, pink order, configure each controller, as player login order identification.
- C. You can use up to four wireless handles at the same time. The number of devices that can be connected at the same time varies from device to device.
- D. When the P4 controller cannot connect to the host, it indicates that the maximum number of wireless devices that can be connected to the host has been exceeded. Unregister unwanted devices from the list of connected devices. In the P4 Host (Settings) > [Device] > [Wireless Device] option, select the device you want to unregister, press the OPTIONS button, and then select [Delete Device]. You can follow the instructions on the screen.

2) Connect to the P3 host

- A. Connect this controller to the P3 console via the USB cable.
- B. When connected to the P3 console, the controller does not support 6-axis motion sensing and vibration.

Low power and charging indication

- 1) Low power indication: When a joystick battery power is over 3.6V, the joystick LED indicator is solid bright; when the power is at 3.3-3.6V, the indicator would blink at 2.5Hz frequency; when the power is lower than 3.3V, the joystick

would be in sleep state.

- 2) Charging indication: When a joystick is connecting to a P4 console via wireless connection, insert a USB charging cable between the joystick and console, the LED of the joystick would blink slowly at 0.5Hz frequency; when the joystick is connected to a power supply instead of a console, the orange LED of the joystick would fade up and fade away during charging, the LED indicator goes off after fully charged.

Parameter reference

Item	reference value
Input voltage/current	DC 5V 500mA
battery capacity	3 7V/600mAh
Operating voltage	DC 3.7-4.2V
Operating current	50~110mA
Vibrating current	80~150mA
Static current	10~ 60uA
Full charge time	3-4h
Dimension	160.5*105.5*68.5mm
Net weight	0.245 kg

The above parameters are for references only, they are subject to actual product.

Packing list

A wireless joystick for P4 , a USB charging data cable and a user guide.

Precautions

- 1) Please don't store this product in damp or high temperature place;
- 2) Do not knock, beat, pierce, or try to disintegrate this product so as not to damage it unnecessarily.
- 3) Don't discard it with garbage as this product is with a lithium battery built-in;
- 4) Don't use this product near fire or heat sources;
- 5) If unauthorized and non-professional personnel dissembled this product and caused damage, this product is not within the scope of after-sales warranty.