

Instruction Manual - EN





Applicable & Feature function

- 1. Thank you for purchasing ISHAKO Game Controller.
- 2. This gamepad works with P-4/Pro/Slim, P-3/PC and iOS , Android Device.
- 3. This game controller has built in double vibration motors, speaker, touch pad, 6-axis, smart light bar, share
- button functions,RGB lighting effects, lighting modes are divided into four types:
 - · 7-color gradient mode
 - · 7-color breathing mode
 - · Blinking mode
 - · Single-color constant light mode

Applicable & Feature function



How to register/pair the controller?



To a USB port on the PS4 console USB cable (supplied with the PS4 system)

HINT

For the details about using the controller, refer to the user's guide of the PS4 console.

Pair the controller for PS4 Console with BT

- The first time you use the controller, or use the controller on another PS4 system, please perform device registration/ pairing. Connect the controller with the PS4 console via USB cable to complete device registration.
- 2. After first time connected, it will automatically connect to the PS4 console.
- When multiple SK P415 controllers are connected to the P54 console, each player has a different controller light color

Pair the controller for PS4 Console and PC with Cable

 Directly use the USB cable to connect the controller to the PC/PS4 console USB interface, the PC and PS4 console will automatically recognize, the PC is successfully connected to the display name: Wireless Controller.

Pair the controller for PC Windows with BT

- Need to make sure that the PC device has Bluetooth capability and that the Bluetooth function is working properly. Press and hold the "SHARE" and "SK Home" buttons on the controller for 5 seconds, the controller enters BT pairing mode.
- 2. The LED indicator on the top of the controller is white with fast double flashing
- 3. The BT name on PC Windows is: Wireless Controller, select the BT device to connect on PC Windows.

Pair the controller for iOS/Android Device with BT

- 1. Press and hold the "SHARE" and "SK Home" buttons on the controller for 5 seconds, the controller enters BT pairing mode.
- 2. The LED indicator on the top of the controller is white with fast double flashing
- The BT name on Android Device is: Wireless Controller, select the BT device to connect on iOS and Android device.

RGB Lighting Mode Adjustment

Press "SHARE" and "OPTIONS" click to change mode; Press and hold the "SHARE" and "OPTIONS" buttons for five seconds to turn off turn off the light effect, RGB Lighting modes are divided into four types:

· 7-Color gradient mode: By red-orange-yellow-green-cyan-blue-violet different light gradient

· 7-Color breathing mode: By green-red-yellow-cyan-pink-blue-violet circular breathing

Blinking mode: By green - red - yellow - green - pink - blue - purple single light flashing back and forth jumping

 Single-color constant light mode: Consists of green-red-yellow-cyan-pink-blue-violet, in single color constant, Press and hold SHARE + right stick to adjust the color up and down in the single-color constant light mode.

Input power rating:	DC 5V, 500mA
Battery type:	Built-in rechargeable Lithium-Ion battery
Voltage:	DC 3.7 V
Battery capacity:	1000 mAh
Operating temperature:	5°C - 35°C (41°F - 95°F)
Weight:	Approx. 200 g (7.0 oz)

Electrical Parameters:

Design and specifications are subject to change without notice.

How to turn on/off?

The controller will start when you press the HOME button or connect to computer by USB cable. If it cannot stop working after a long time, please plug the USB cable in computer then pull it out, thus it will be power off. Please disconnect BT when stop playing with the controller, then it would turn off automatically. If the LED light remains on, it may because it's still BT connect.

You can restart it by pressing the RESET hole on the back of the gamepad with a pin for 5 seconds, the gamepad would get reset.

How to Charge the Controller?

Charge the controller with the USB cable or charging dock.

When charging, the light bar will be flashing orange; when fully charged, the light bar turns off.

How to fix PS4 Mic not working?

Setting->Devices->Audio Devices->output to headphones->All Audio

Battery life and duration

Do not handle damaged or leaking lithium-ion batteries.

The battery has a limited life span. Battery duration will gradually decrease with repeated usage and age. Battery life also varies depending on the storage method, conditions of use and environmental factors.

Charge in an environment where the temperature range is between 10°C - 30°C (50°F - 86°F). Charging may be not as effective when performed in other environments.

When the wireless controller is not used for an extended period of time, it is recommended that you fully charge it at least once 3 months to help maintain battery functionality.

Use and handing precautions

Avoid prolonged use of this product. Take a break at about 30 minutes intervals.
 Stop using this unit immediately if you begin to feel tired or if you experience discomfort or pain in your hands or

- arms during use. If the condition persists, consult a doctor.
 Permanent hearing loss may occur if the headset or headphones are used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging your hearing. If you experience ringing or any discomfort in your ears or muffled speech, stop listening and have your hearing checked.
- The louder the volume, the sooner your hearing could be affected. To protect your hearing: Limit the amount of the time you use headset or headphones at high volume. Avoid raising the volume to block out noisy surroundings.
- Lower the volume if you can t hear people speaking near you.
- Avoid looking into the light bar or the controller when it is flashing. Stop using the controller immediately if you
 experience any discomfort or pain in any body parts.

This product is intended for use with the hands only.

The vibration function of this product may aggravate injuries. Do not use the vibration function if you have any ailment or injury to the bones, joints, or muscles of your hands or arms.

Note that some software titles enable the vibration function by default. To disable the vibration function,

select (Settings) (Devices) (Controllers) from the function screen, and then remove the checkmark from [Enable Vibration]

- · Do not expose the product to high temperatures, high humidity or direct sunlight.
- · Do not allow the product to come into contact with liquids.
- · Do not put heavy objects on the product.
- · Do not throw or drop the product or subject it to strong physical shock.

When using the motion sensor function, be cautious of the following points. If the controller hits a person or object, this may cause accidental injury or damage.

- Before using, check that there is plenty of space around you.
- When using the controller, grip it firmly to make sure it cannot slip out of your hand.

- If using a controller that is connected to the PS4 system with a USB cable, make sure there is enough space for the cable so that the cable will not hit a person or object. Also, take care to avoid pulling the cable out of the PS4 system while using the controller.

Exterior protection

Follow the instructions below to help prevent the product exterior from deteriorating or becoming discolored.

Do not place any rubber or vinyl materials on the product exterior for an extended period of time.

Use a soft, dry cloth to clean the product. Do not use solvents or other chemicals. Do not wipe with a chemically-treated cleaning cloth.



Customer Service:

Due to the official game platform software upgrades or source code changes and other not resist factors caused some of the games cannot be played or connected with our Gamepad, please kindly visit our website: http://www.sakoglobal.com, or contact us by email cs@sakoglobal.com for help.

Contact us

www.ishakomall.com

cs@sakoglobal.com

@Ishakomall

Join us to get extended warranty or get a gift.