

For P-3/Slim

PC Windows

Game Controller

WIRELESS CONTROLLER


Instruction Manual



Applicable & Feature function

1. Thank you for purchasing ISHAKO Wireless Controller.
2. This controller is compatible with P-3/Slim, PC Windows, Android Device
3. The gamepad will go to sleep if it is not used for 5 minutes. When you need to use it again, you need to press HOME button to wake it up.

Applicable & Feature function

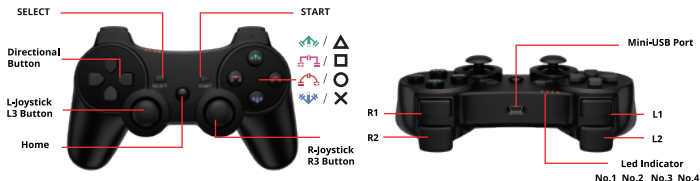

How to register/pair the controller?

1. Wired Connection

Perform device registration/pairing when using the joystick for the first time or when using the joystick on another P-3 system. Connect the joystick to the P-3 main unit via the USB cable and press hold "Home" button to complete device registration.

Once the controller has been successfully registered in the P-3, the USB cable can be unplugged for wireless connection. After 5 minutes of inactivity, the controller will automatically go into hibernation. To activate it again, you need to press the "Home" button and the controller will automatically reconnect to the P-3 console.

2. Wireless Connection

Before use, first press and hold the "START" + "Home" buttons, at this time LED No.1 and LED No.3 flash rapidly, at this time you can see the controller in the Bluetooth list.

Connecting with PC Windows using BT:

First press and hold "START", then press and hold "Home" button, at this time, the top LED No.1 and No.3 are flashing rapidly, at this time, you can click "Settings" > "Add Device" of Windows, the controller will be displayed in the BT add list. After successful connection, LED No.1 and LED No.3 will always light up.

Connecting with iOS or Android Device using BT:

Press and hold "START", then press and hold the "Home" button, the top LED No.1 and LED No.3 will flash rapidly, at this time you can click on the phone settings > Add Device, the controller will be displayed in the BT list, Connection After successful connection, LED No.1 and LED No.3 will always light up.

On Android devices, the controller only supports games with controller settings.

On iOS devices, the controller only supports games with controller settings.

Please note

If you have switched the mode of the controller and wish to connect to the P-3 or a wired PC device again, you will need to modify the mode of the controller by pressing and holding the Home button for 3-5 seconds after connecting the USB cable to re-match the mode of the controller.

Electrical Parameters

Input power rating:	DC 5V, 500mA
Battery type:	Built-in rechargeable Lithium-Ion battery
Voltage:	DC 3.7 V
Battery capacity:	450 mAh
Operating temperature:	5°C - 35°C (41°F - 95°F)
Weight:	Approx. 200 g (7.0 oz)

Design and specifications are subject to change without notice.

How to turn on/off?

Under normal conditions, pressing the "Home" button wakes up the controller. Also, press and hold the "Home" button for 5 seconds to turn off the controller. If the LED is still on, probably because it is still connected to the device, you can force the controller to turn off by inserting a large pin into the small hole under the L2 button on the controller.

How to Charge the Controller?

It is recommended to use the Mini-USB cable included in the package to charge the controller. If a charging plug is used, it is not recommended that the voltage of the charging plug exceeds 5V, which may cause damage to the batteries. The LED4 indicator blinks rapidly to indicate when the battery is low.

Use and handling precautions

Avoid prolonged use of this product. Take a break at about 30 minutes intervals.

Stop using this unit immediately if you begin to feel tired or if you experience discomfort or pain in your hands or arms during use. If the condition persists, consult a doctor.

Permanent hearing loss may occur if the headset or headphones are used at high volume. Set the volume to a safe level. Over time, increasingly loud audio may start to sound normal but can actually be damaging your hearing. If you experience ringing or any discomfort in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the sooner your hearing could be affected. To protect your hearing:

- Limit the amount of the time you use headset or headphones at high volume.
- Avoid raising the volume to block out noisy surroundings.
- Lower the volume if you can't hear people speaking near you.
- Avoid looking into the light bar or the controller when it is flashing. Stop using the controller immediately if you experience any discomfort or pain in any body parts.
- This product is intended for use with the hands only.

The vibration function of this product may aggravate injuries. Do not use the vibration function if you have any ailment or injury to the bones, joints, or muscles of your hands or arms.

Note that some software titles enable the vibration function by default.

- Do not expose the product to high temperatures, high humidity or direct sunlight.
- Do not allow the product to come into contact with liquids.
- Do not put heavy objects on the product.
- Do not throw or drop the product or subject it to strong physical shock.
- When using the motion sensor function, be cautious of the following points.

If the controller hits a person or object, this may cause accidental injury or damage.

- Before using, check that there is plenty of space around you.
- When using the controller, grip it firmly to make sure it cannot slip out of your hand.
- If using a controller that is connected to the game console with a USB cable, make sure there is enough space for the cable so that the cable will not hit a person or object. Also, take care to avoid pulling the cable out of the game console while using the controller.

Battery life and duration

Do not handle damaged or leaking lithium-ion batteries.

The battery has a limited life span. Battery duration will gradually decrease with repeated usage and age.

Battery life also varies depending on the storage method, conditions of use and environmental factors.

Charge in an environment where the temperature range is between 10°C - 30°C (50°F - 86°F). Charging may be not as effective when performed in other environments.

When the wireless controller is not used for an extended period of time, it is recommended that you fully charge it at least once 3 months to help maintain battery functionality.

Exterior protection

Follow the instructions below to help prevent the product exterior from deteriorating or becoming discolored

Do not place any rubber or vinyl materials on the product exterior for an extended period of time. Use a soft, dry cloth to clean the product. Do not use solvents or other chemicals. Do not wipe with a chemically-treated cleaning cloth.

Package list:



Gamepad x1



Charging cable x 1



User Manual x 1

Customer Service:

Due to the official game platform software upgrades or source code changes and other not resist factors caused some of the games cannot be played or connected with our Gamepad, please kindly visit our website: <http://www.sakoglobal.com>, or contact us by email cs@sakoglobal.com for help.

Contact us



www.ishakomall.com



cs@sakoglobal.com



[@Ishakomall](https://www.facebook.com/Ishakomall)

Join us to get extended warranty or get a gift